

Get to know your new Remote

Your recordings

Change device

Previous screen

HOLD TO RETURN TO LIVE TV

Skip back or forward

HOLD TO REWIND
OR FAST FORWARD

Type to search

HOLD TO REPROGRAM

Closed captions

HOLD TO REPROGRAM



Voice control

PRESS AND HOLD WHILE SPEAKING



Record this

Show movies

Tune to FOX News

What's the weather?

Movie or series details

HOLD FOR ONSCREEN HELP

Activate

- 1 SLIDE the latch up
- 2 REMOVE the battery door

Remove the pull tab to activate

BATTERIES ARE INCLUDED



Pair to DISH


STEP 01

On your DISH receiver



Press the **SYS INFO** button

OR

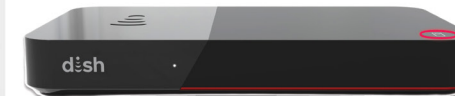

Press the **SAT** button

STEP 02

Press the SAT button

YOU'LL HEAR A PAIRING SOUND



Pair to TV

To control power and TV volume
with your remote:



Press: **HOME BUTTON**



Navigate to: **DISH SETTINGS**



Select: **REMOTE CONTROL**



Select: **TV UNDER DEVICES**



Select: **TV PAIRING WIZARD**

NEXT, FOLLOW THE ONSCREEN PROMPTS



Warranty, safety, regulatory and legal information can be found at mydish.com/productinfo

54.0 Voice Remote
DN019534

Record what you're watching

- 1 Press **SELECT** on remote
- 2 Select: **RECORD**



SET UP A RECORDING

- 1 Press **GUIDE** on remote
- 2 Pick an upcoming program
- 3 Select: **RECORD THIS**



Control devices

- 1 Press **SAT** to control your DISH receiver



- 2 Press **TV** or **AUX** to control your paired devices
LIMITED MODE must be OFF to use



TROUBLESHOOTING

Visit our website for easy fixes for common issues:



mydish.com/troubleshooting

TECHNICAL SUPPORT
1-800-333-3474


Locate your remote

On your DISH receiver



Press the **LOCATE REMOTE** button

OR

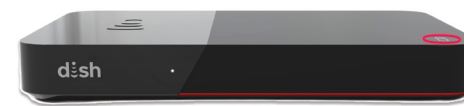

Press the  button

- Wait a moment for your remote to start beeping
- Press any button on the remote to stop beeping

CHANNEL LISTINGS

For a full channel list and schedule, visit our website:



mydish.com/channels

Notes

Your Remote

