

# Remote Control


Model 40.0

Quick Start Guide





# Turn On Your Remote


- 1 Remove the *PULL* tab on the back of your remote

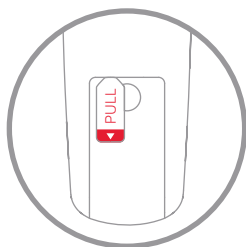

- 2 Open the front panel of your DISH receiver, and press the *SYS INFO* button

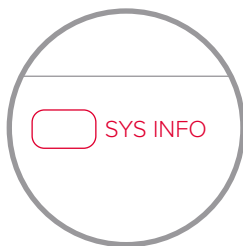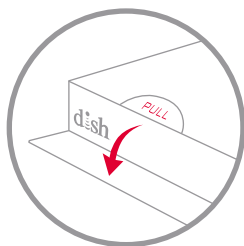


- 3 Press the *SAT* button on your remote control

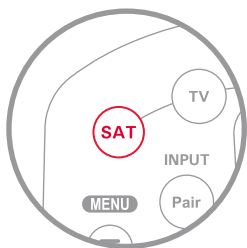


You will hear three beeps from the remote control, indicating it has paired with your DISH receiver

# Pair Your Remote

- 1 Press the *MENU* button on your remote

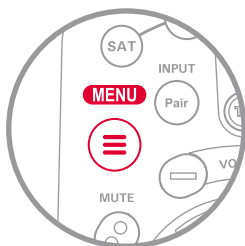

- 2 Select *Settings* and then *Remote Control* or *Remote Manager*

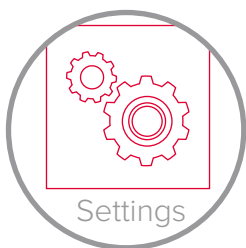


Settings




Remote

- 3 Select *TV* and then *TV Pairing Wizard* or *Lookup Code*

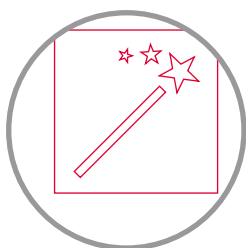

or

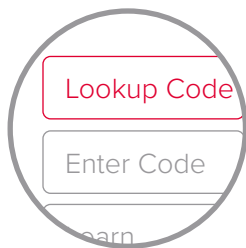

- 4 Follow the prompts

- 5 If desired, pair your remote with an auxiliary device such as a Blu-ray player or stereo

# Explore Your Remote

## Device Power

Turn your DISH receiver—or another device you are controlling—on or off

## Input

Change your TV's input when in TV mode

## Menu

Access all features

## Recall

While watching TV, press to see the channels you watched recently

## Info

Get more information about the program you're watching or one you've highlighted

## Search


Find your favorite TV shows, movies, and sports


## Colored Buttons

Access options and features available on the current menu

## Picture in Picture (PiP)

Control PiP windows and their orientations

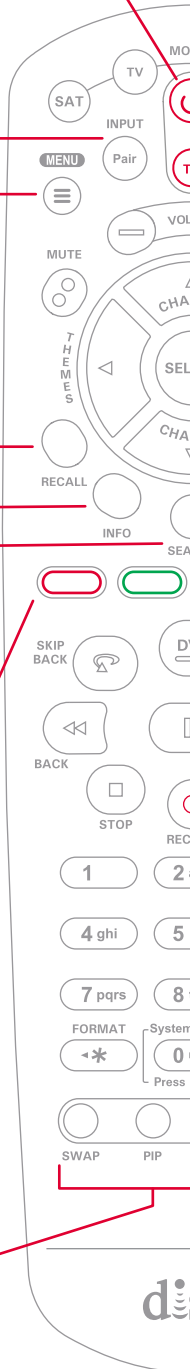

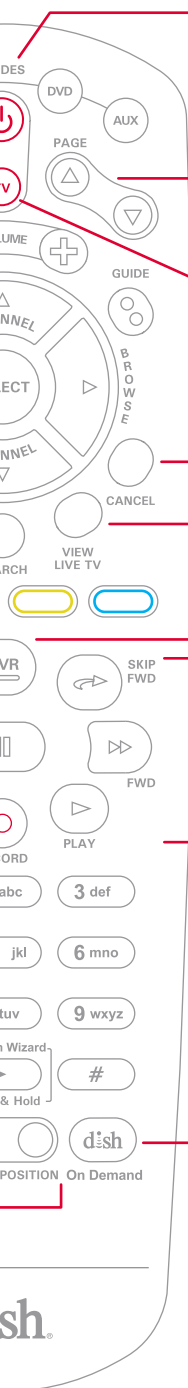

## Device Buttons

Change the device you want to control: SAT (your DISH receiver), TV, DVD/Blu-ray player, or auxiliary device

## Page Up & Down

Page through menus such as the *Guide*

## TV Power

Turn your TV on or off

## Cancel

Go back one menu

## View Live TV

Return to the program you are watching

## DVR

Access all of your recordings

## Playback Control


While watching TV, use these buttons to pause, rewind, fast-forward, record, and more

## On Demand

Explore thousands of free and premium movies and TV shows

# Locate Your Remote Anytime

- 1 Open the front panel of your DISH receiver

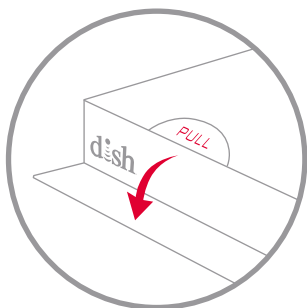

- 2 Press the *LOCATE REMOTE* button



You will hear a series of beeps from your remote, allowing you to find it

# Regulatory Information

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference,  
and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by following one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this device may void your authority to operate this equipment.

## Safety Instructions

You must keep safety in mind while using this device. Keep these and any other instructions for future reference.

Observe Warnings: Carefully follow all warnings on the device and in the operating instructions.

Heat: Do NOT place the device near heat sources such as radiators, stoves, heat registers, or other appliances that produce heat.

## Case and Use

Cleaning: Do NOT use liquid, abrasive, solvent, or aerosol cleaners. Use a damp cloth for cleaning.

When Not in Use: Remove the batteries if this device is to be left unattended or unused for a long period of time.



WARNING - This product can expose you to Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



Refer servicing to qualified personnel when a solid object or liquid has fallen onto or into the device.



Do NOT attempt to service this device. Refer all servicing to qualified personnel. Opening covers other than the battery cover will void the warranty.

# Need Help?



Press # for help in each menu



Channel 103



The Hopper Features Guide



[mydish.com/support/remotes](http://mydish.com/support/remotes)



TUNED IN TO YOU™