 
 


# Set up your voice remote in 3 easy steps.

 
**01** Remove the remote's back cover, and then the pull tab. Replace the cover.

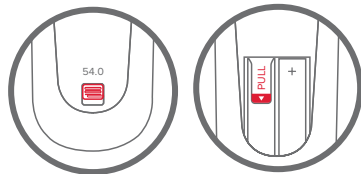

**02** Press the **SYS Info** button on your receiver.

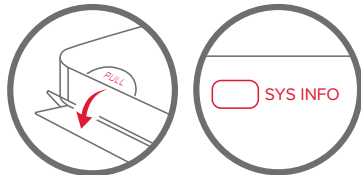

**03** Press the **SAT** button on the side of your new remote. 3 beeps indicate the process is complete.

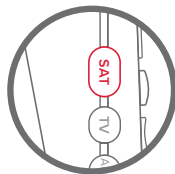

# Take Control With Your Voice

- 1 Press and hold the voice button. Follow the onscreen prompts to enable voice control, then press and hold the button again.



- 2 Ask to find a movie, TV show, or actor. Or rewind or fast-forward programming. You can also find out weather or traffic information in your area, or anything else you want to learn from the Google Assistant. See voice-command examples to the right.
- 3 Release the voice button.

Note: To enjoy voice control, your receiver must be connected to the Internet. Look to the instructions at right if needed.

## Voice command examples:



“Tune to HGTV.”  
“Search for *Property Brothers*.”  
“Go to On Demand.”  
“Open Netflix®.”  
“What’s the score of the Broncos game?”  
“Who plays Michael Scott in *The Office*?”  
“What’s the weather like today?”  
“Turn on the living room lights.”\*  
“Add popcorn to my shopping list.”

\*Some commands require smart home equipment.

For a full list of commands, visit [dishvoiceremote.com](http://dishvoiceremote.com).

# Connect Receiver to the Internet

If needed, follow these steps to connect your receiver wirelessly to the Internet.

1 Press the home button twice.



2 Select Settings, then Internet.



 
3 Select Wireless Setup, and then Wi-Fi Setup Wizard.



4 Follow the prompts.

You can also connect an Ethernet cable directly from your modem or router to the back of your receiver.

# Explore Your Remote

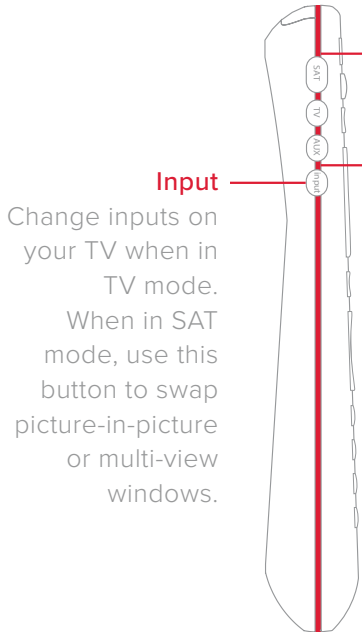


## Input

Change inputs on your TV when in TV mode. When in SAT mode, use this button to swap picture-in-picture or multi-view windows.

## Device Buttons

Use your remote as a universal remote control by pairing it with your TV and an auxiliary device, such as a Blu-ray™ player or stereo.

 Tip: If you ever lose your remote, just press the Locate Remote button on the front of your DISH receiver to find it! For more cool remote features, visit [dishvoiceremote.com](http://dishvoiceremote.com).

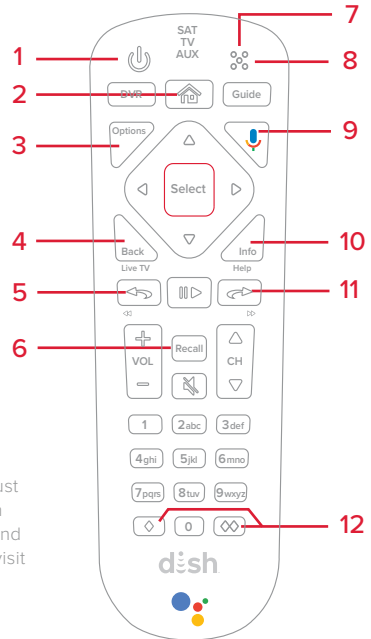

# Explore Your Remote

- 1 Power** - Turn your TV, DISH receiver, and other selected devices on and off.
- 2 Home** - Easily find shows, movies, and sports that are live, on your DVR, or on demand – all in one place.
- 3 Options** - Access additional options and features in the current menu.
- 4 Back/Live TV** - Press to go back one menu. Press and hold to go to live TV.
- 5 Skip Backward** - Press to skip back 10 seconds. Press and hold to rewind.
- 6 Recall** - While watching TV, press to tune to channels you have watched recently.
- 7 Microphone** - Listens to you when you are using voice control.
- 8 Light Sensor** - Extends battery life by determining whether backlighting should be activated when you pick up the remote.
- 9 Voice Control** - Press and hold down the mic button to ask the Google Assistant to help you find what you're looking for.
- 10 Info/Help** - Press to get more information about a program. Press and hold to get quick tips and tricks in most menus.
- 11 Skip Forward** - Press to skip forward 30 seconds. Press and hold to fast-forward.
- 12 Diamond & Double-Diamond Buttons** - Press and hold to customize these buttons to turn closed captioning on/off, launch Netflix®, turn on picture in picture, and more.

# Program Your Remote to Your TV

If your TV is unresponsive when pressing the volume “+” or “-” buttons on your new remote, try the following steps to ensure the remote is programmed to your TV.

- 1 Press the home button twice.



- 2 Select Settings, then Remote Control.



- 3 Select TV, and then TV Pairing Wizard.



- 4 Follow the prompts.

- 5 You can also pair your remote with an Auxiliary Device, such as a Blu-Ray player or Stereo.



# Regulatory Information

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference,  
  
and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by following one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this device may void your authority to operate this equipment.

## Safety Instructions

You must keep safety in mind while using this device. Keep these and any other instructions for future reference.

Observe Warnings: Carefully follow all warnings on the device and in the operating instructions.

Heat: Do NOT place the device near heat sources such as radiators, stoves, heat registers, or other appliances that produce heat.

## Case and Use

Cleaning: Do NOT use liquid, abrasive, solvent, or aerosol cleaners. Use a damp cloth for cleaning.

When Not in Use: Remove the batteries if this device is to be left unattended or unused for a long period of time.



**WARNING** - This product can expose you to Bisphenol A (BPA) which is known to the State of California to cause birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



Refer servicing to qualified personnel when a solid object or liquid has fallen onto or into the device.



Do NOT attempt to service this device. Refer all servicing to qualified personnel. Opening covers other than the battery cover will void the warranty.

Need Help?



Press and hold Info/Help



[mydish.com/support/remotes](https://mydish.com/support/remotes)



**Tuned In To You.**